

# LB Series 252mm Emergency Minibar

- Heavy Duty Emergency Minibar
- High brightness 1 watt LEDs
- Quad Flash Pattern
- IP67 Ingress Protection
- Voltage Range 10-30 Volt
- 2 Year Warranty

**SAE/J845**  
Class 1

**ECE R10**  
Compliant

**IP67**  
Protection

**2 Year**  
Warranty



Active




<b>Function</b>	Amber Emergency Minibar
<b>Size</b>	252mm x 150mm x 45mm
<b>Voltage</b>	Multivolt 10-30V
<b>LED Qty</b>	30 x 1 Watt
<b>LED Lifespan</b>	30,000 Hours
<b>Beam Angle</b>	360° Omnidirectional
<b>Cable</b>	50cm cable
<b>Temp °C Range</b>	-40°C to +60°C

## Draw

<b>@13.8V</b>	2.25A
<b>@28V</b>	1.07A
<b>Lens</b>	Polycarbonate
<b>Base</b>	Polycarbonate
<b>Bracket</b>	Painted Steel
<b>Fittings</b>	Stainless Steel



Part No.  
**LB252ACM** - Box

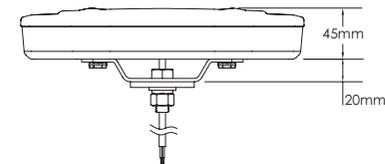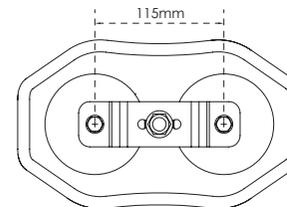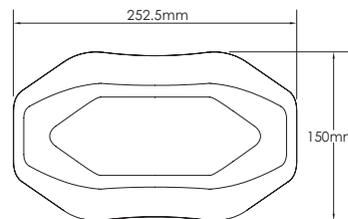

All enquiries P: (03) 9466 7075 E: [led@ledtech.com.au](mailto:led@ledtech.com.au), [www.ledautolamps.com](http://www.ledautolamps.com)

All efforts are made to ensure all information is correct and up to date, it can be subject to change without notice. All measurements are in millimeters (mm) and are not to scale.

© All LED Technologies designs are registered throughout the world. - Current as of 14/05/2019



# LED EMERGENCY BAR

R10 APPROVED - SAE/J845 Class 1 Compliant

## Operating Instructions

Part No.    LB252ACM                    LB621ACM                    LB862ACM                    LB1103ACM                    LB1345ACM

**IMPORTANT!** Read all instructions before installing and operating emergency bar. This manual must be delivered to the end user. This manual assumes installation by a suitably qualified automotive technician.


### SPECIFICATIONS:

Function	Emergency Bar
LED Colour	Amber
Voltage Range	10–30VDC
Max Power	30W/48W/64W/80W/96W
LED#	30/96/128/160/192
Flash Pattern#	Quad Flash Pattern (LB252ACM) 10 Flash Patterns (LB621/862/1103/1345ACM)
Approval	ECE R10, SAE/J845 Class 1
IP Rating	IP67
Lens	Polycarbonate
Mounting	Single Bolt/Bracket (LB252ACM only) 4 Point Fixed Base


No	Flash Pattern
1	Rotate
2	Single (Class 1, LB621/862/1103/1345)
3	Quad (LB252ACM Class1 Only)
4	Quint Split
5	Single/Triple/Quint

No	Flash Pattern
6	Fast/Slow Split
7	Sequential Combine
8	Left/Right Split/Single
9	Random 1
10	Random 2

#### 4 Point Fixed Base

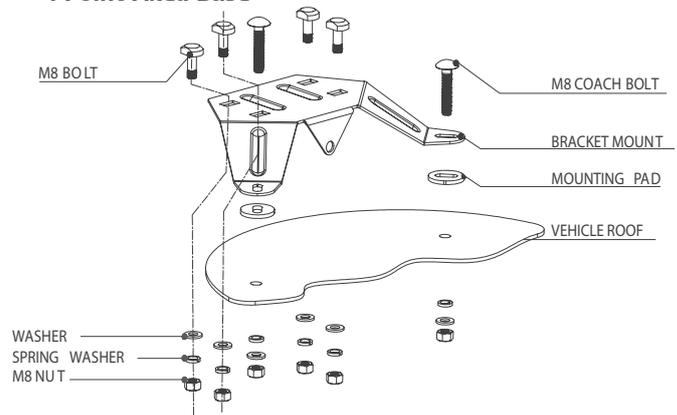

#### Single Bolt/Bracket (LB252ACM only)

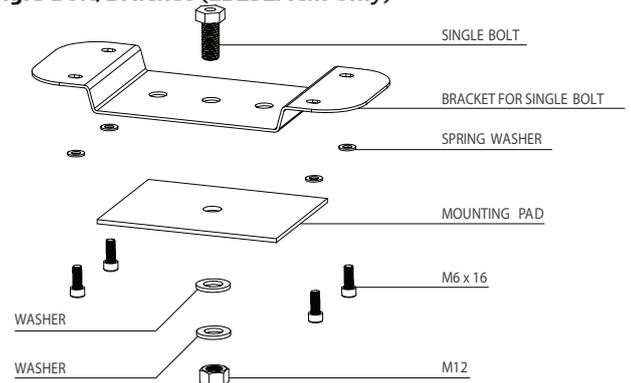

### PRE-INSTALLATION:

- 1) Carefully unpack and inspect the emergency bar and all mounting accessories before attempting installation. If any parts are found to be damaged or missing please contact your LED Autolamps distributor for advice.
- 2) Plan all cable routing before proceeding with installation. When drilling vehicle surface ensure the area is free from any wires, fuel lines, upholstery, air bags etc. that could be damaged.


### MOUNTING LOCATION:

Ensure the chosen mounting location is a smooth flat area of the vehicle roof. Position the emergency bar centrally to the vehicle's width. When mounting the product ensure it is level from front-to-back and left-to-right. Ensure there are no obstructions limiting visibility to traffic

**IMPORTANT!** This unit is a safety device and it must be connected to its own separate, fused power point to assure its continued operation should any other electrical accessory fail. Do not wire in parallel with any other accessory. Disconnect the battery before wiring up the minibar, to prevent accidental shorting, arcing and/or electrical shock.

**WIRING INSTRUCTIONS:** Route wires from the vehicle positive feed to the switch panel in the cab. Use suitable high-temperature vehicle wire if it passes through the engine compartment. Install a suitable in-line fuse as close to the power feed as possible. Ensure emergency bar Black wire is connected to ground source on vehicle. Use cable ties and grommets to secure and protect all cables and wires.

**⚠ If in doubt, please consult a qualified automotive electrician.**

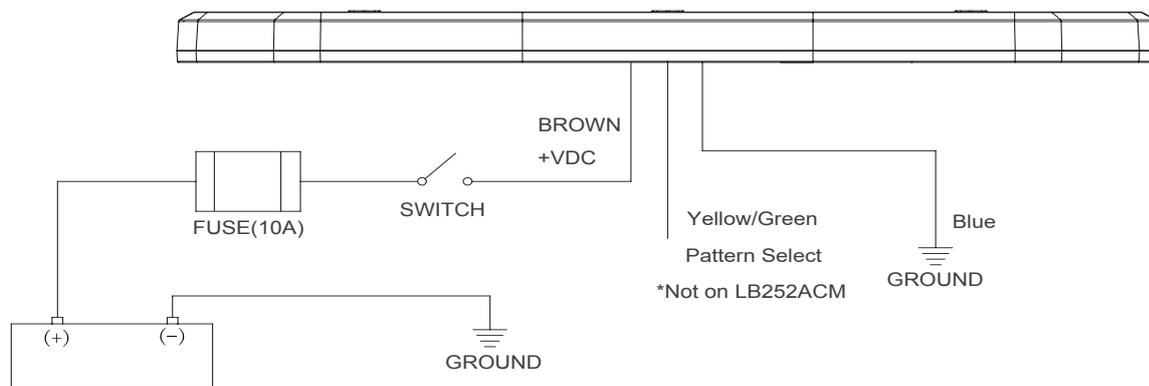

Next Pattern, Touch Yellow/Green wire to Brown +VDC for 0.5 sec.

Return to Default Pattern #1, Touch Yellow/Green wire to Brown +VDC wire for 2.5 sec.

## Conditions with Warranty Against Defects

**2 YEAR WARRANTY**

This warranty covers faults in components and workmanship of the lamp itself when used under normal conditions and does not cover the following:

- Faulty installation
  - Over-voltage
  - Accidental damage
  - Freight charges
  - Excessive heat damage
  - Misuse or abuse
  - Cost of labour for removal and or replacement
  - Chemicals that damage plastics as per Chemical Resistance List
- (see our website for more information).

**Making a Claim:** All warranty returns must be tested off the vehicle to ensure that the unit is at fault. This can be done by directly attaching the lamps to a fully charged 12-volt battery. Do not replace any products unless you are 100% sure that the suspected faulty product will be covered under warranty. If the unit is faulty, call your place of purchase so it can be directed to the LED Technologies warranty department or contact the LED Autolamps warranty department direct for full testing, evaluation, and warranty repairs.

If you consider the lamp to be faulty, disconnect the wiring of the lamp, remove nuts from bolts and send to: **LED Autolamps Reply Paid 90350, PO Box 2107 Bundoora VIC 3083**, allow five business days for evaluation. Please ensure returned warranties/credits have a completed Warranty Claim Form, which is found on our website under the "Warranty" Tab.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For more information, contact

### **LED Autolamps**

Phone 03 9466 7075, Email led@ledtech.com.au  
or visit our website www.ledautolamps.com.

**Head Office** 42 Enterprise Drive Bundoora Vic 3083